



TrueFace6000-PW Back to Back (Connection Diagram)

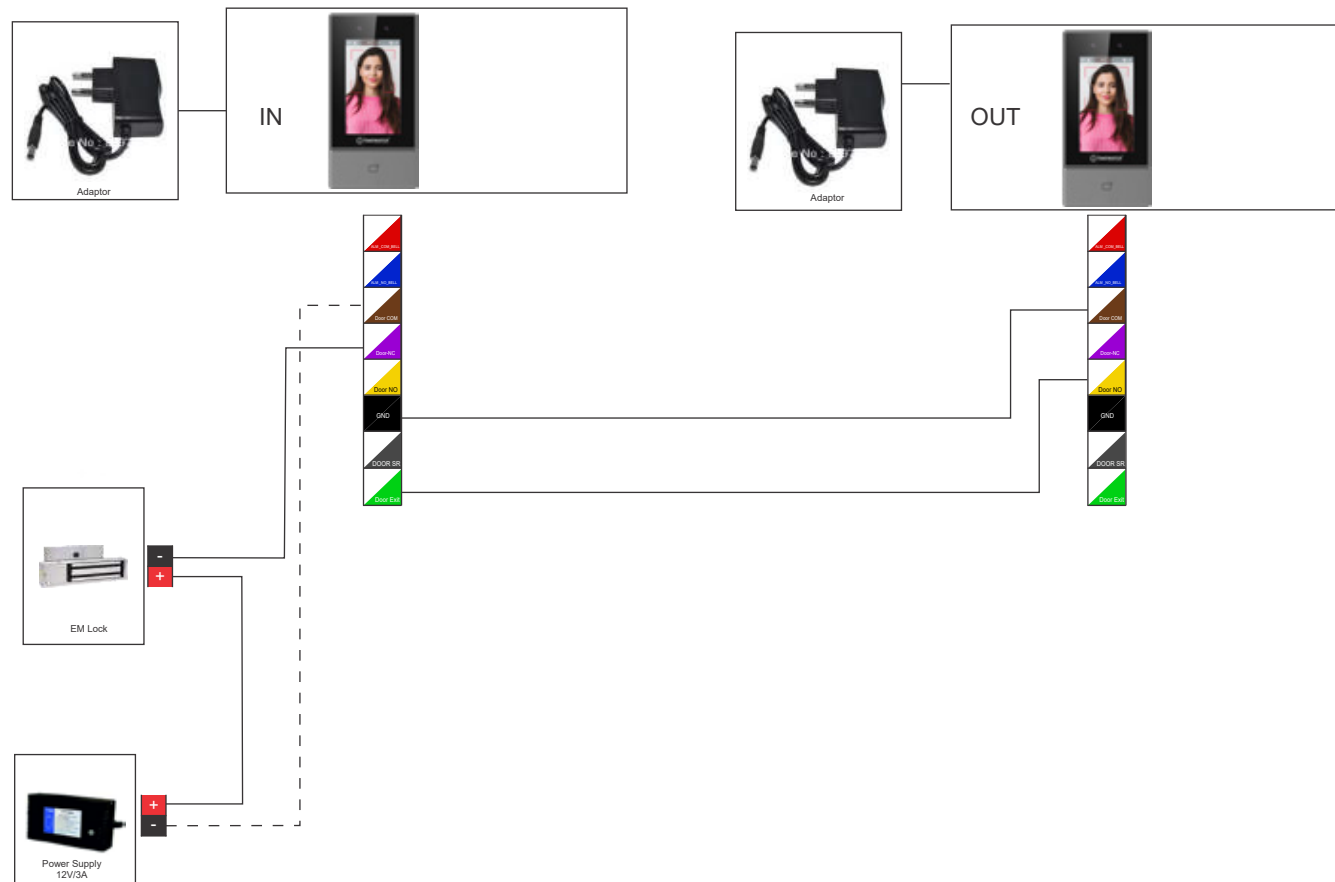

TrueFace6000-PW with Push Button (Connection Diagram)

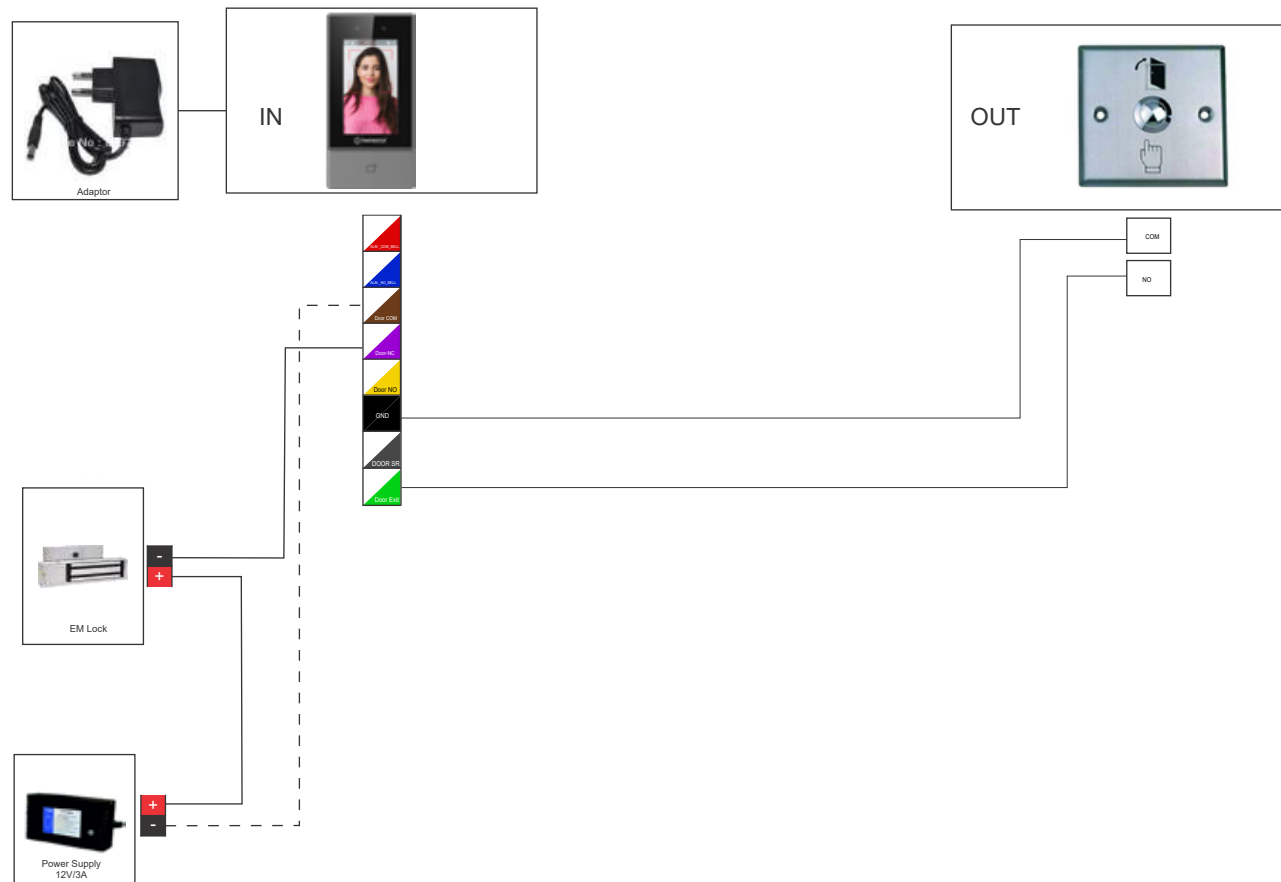

TrueFace6000-PW with any Wiegand Reader (Connection Diagram)

